



# ThreadGUARD™

## Installation Instructions

### Step 1

If installing the ThreadGUARD on an existing system it is recommended that you consult a fire suppression installation company regarding the draining of the suppression lines before installation.

### Step 2

Remove any packaging from the ThreadGUARD.

### Step 3

Use an appropriate amount of joint sealant (pipe dope, Teflon tape, etc.) on the threaded fitting of the ThreadGUARD baseplate.

### Step 4

Thread the ThreadGUARD baseplate into the threaded fitting of the suppression system.

**NOTE:** Be careful not to cross thread the fitting.

### Step 5

Once you have successfully installed the ThreadGUARD baseplate you use an appropriate amount of joint sealant (pipe dope, Teflon tape, etc.) on the threads of the sprinkler head and then thread the sprinkler head into the ThreadGUARD baseplate hole.

**NOTE:** Be careful not to cross thread the fittings.

### Step 6

Once you have successfully installed the sprinkler head you can now lower the ThreadGUARD cage down over the sprinkler head and secure it with the two bolts that are provided.

**Approved for use with the following sprinkler heads:**

**Reliable Model:** RA1314, RA1325, RA1414, RA1425, R2921, R1712, R1722, R3612, R3622

**Viking Model:** VK300, VK350, VK100, VK102, VK200, VK202

**Tyco Model:** TY313, TY3121, TY4131, TY315, TY325, TY3211, TY3111, TY4111, TY4211

