





В

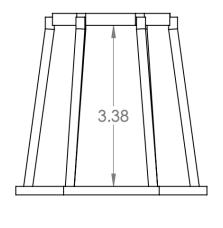

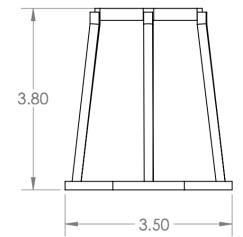

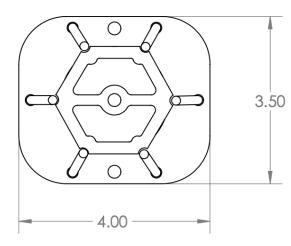



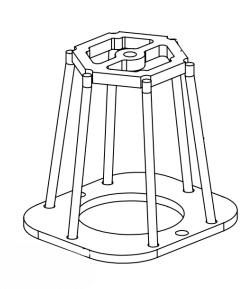


The SG123 Cage is designed to be used on the ThreadGUARD and WeldGUARD base plates as well as the SG143 Adjustable Branch Line Guard.

www.sprinkguard.com info@sprinkguard.com 877-274-7976

Copyright 2023

2


•

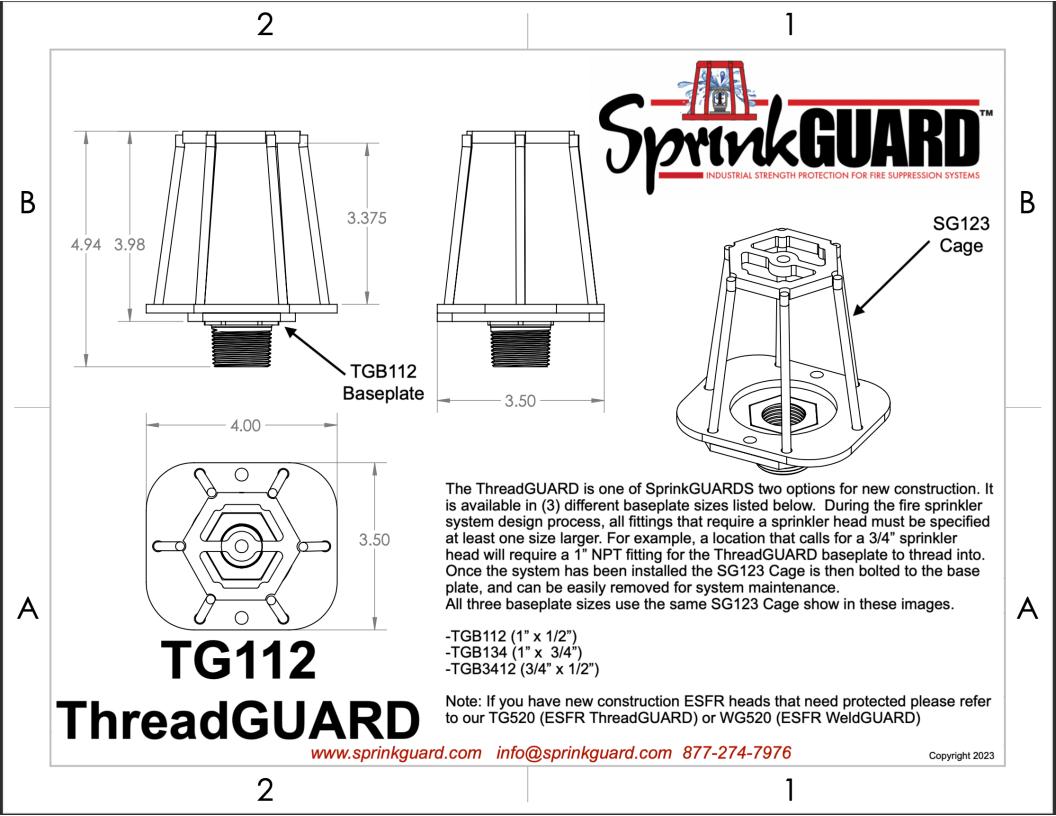

1.125



Ø.27 2.25 3.00 3.50

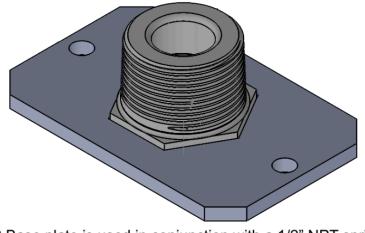

TGB112 Base plate is used in conjunction with a 1/2" NPT sprinkler head and threads into a 1" NPT fitting. Once the baseplate and sprinkler head have been properly installed into the system, the SG123 Cage is bolted directly onto the TGB112 base plate.

TGB112 THREADGUARD BASE PLATE

www.sprinkguard.com info@sprinkguard.com 877-274-7976

Copyright 2023

1.125 B Ø.27 2.25 3.00 TGB134 Base plate is used in conjunction with a 3/4" NPT sprinkler head and threads into a 1" NPT fitting. Once the baseplate and sprinkler head have been properly installed into the system, the 3.50 SG123 Cage is bolted directly onto the TGB134 base plate. **TGB134 THREADGUARD BASE PLATE**

www.sprinkguard.com info@sprinkguard.com 877-274-7976

1

Copyright 2023

